
DISABLE HVAC UNIT WHEN DOOR OR WINDOW IS OPEN

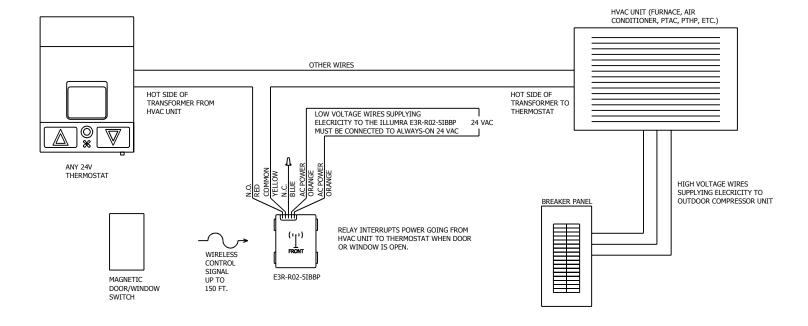

ALWAYS INSTALL DEVICES IN ACCORDANCE WITH LOCAL ELECTRICAL REGULATIONS.

