

MOTOR STARTS BY PRESSING START SWITCH OR BY PRESSING THE TOP HALF OF ROCKER ON ANY WIRELESS SWITCH.
MOTOR STOPS BY PRESSING STOP SWITCH OR BY PRESSING THE BOTTOM HALF OF ROCKER ON ANY WIRELESS SWITCH.